

# HEAVY DUTY



## Instructions for Installation of the 1792, 1792XD and 1792XE for Caterpillar® Applications

It is important to install all filters in accordance with the manufacturer's recommended procedures to avoid leakage, loosening, displaced gaskets and other unnecessary problems. Proper installation, and especially the proper tightening, of lube filters on heavy-duty applications is crucial due to vibration, system pressures, heat and other conditions experienced while in use.

Installation tips for these filters are as follows:

1. Using a filter wrench, remove the old filter.
2. Clean the filter mounting base making sure that any remnants of the gasket or other foreign materials are removed.
3. Apply a thin film of clean engine oil to new filter's gasket. (Do not use grease.)
4. Spin on the new filter. When the gasket contacts the mounting base, rotate the filter 1 turn. (This reflects a 1/4 turn increase over previous recommendations.)
5. Refill the system with the recommended fluid.
6. Start the engine and check for leakage.



The NAPA 1792



It is important to install all filters in accordance with the manufacturer's recommended procedures to avoid any unnecessary problems.